

More Features and Benefits of 9000.

Easily removes liquids!

Easy Installation, Low Investment, Low Maintenance

- Thinking manure auger?
Consider a better alternative.
- By removing liquids, the manure will go up the slide.
- Unlike an auger, you can still use a gutter cleaner for box stall manure.
- Solve overflow problems of leaky drinking cups and broken pipes.
- Widely used to transfer wash water from milking parlors to lagoons/holding areas. Additional water provides a better, quicker, and thorough agitation of the lagoon.
- Sleep better with an optional automatic control to start and stop pump.
- Installs anytime; use the next day.
- You don't need any extra space for installation.
- To eliminate corrosion, the system has a pump with stainless steel parts and utilizes PVC piping that won't rust.
- Should the pump need service, it lifts out easily. Even with the pump out for service, the gutter cleaner is still operable.

Specifications

Pump

1/2 hp. 1625 RPM: Single phase; 230 volts; 5.8 amps; 84 lbs. (38 kg); Two-vane, nonclogging impellers.

Pump Performance

G.P.M. at total head in feet.

| | | | | |
|---------|---------|---------|---------|---------|
| 5' | 10' | 15' | 20' | 25' |
| 1.524 m | 3.048 m | 4.572 m | 6.096 m | 7.620 m |
| 160 | 125 | 80 | 20 | Shutoff |

Subtract 2-1/2 ft. (76.2 cm) of head per 90° elbow.

Gutter Widths

15 in. to 20 in. (381 mm to 508 mm)

Hole Size for Installation

18 in. (457 mm) wide x 24 in. (610 mm) long x 30 in. (762 mm) depth below gutter bottom (20 gal. sump)

Pipe Size

2 in. (50.8 mm) PVC schedule 40 pipe supports should be every 10 ft. (3 m) apart

Pump Dimensions

| | |
|-------------------------|---------------------|
| Height to top of handle | 19-3/8 in. (492 mm) |
| Width at widest point | 12-5/8 in. (321 mm) |
| Discharge | 2 NPT |
| Suction inlet opening | 2 in. (51 mm) |
| Weight | 84 lbs. (38 kg) |



CAUTION: Never operate Patz equipment without all shields and guards in place. Safety is no accident. Before operating any piece of equipment, be sure to read and understand the operators manual. The manual should be kept with the machine at all times. Additionally, make sure all safety shields and devices are functioning properly and are securely in place.



For some photos in this brochure, guards were removed for photographic purposes only to allow viewing of the equipment features. Before operating equipment, all guards must be in place. Because Patz continually improves and updates products, Patz reserves the right to change the construction of machines or attachments or any part thereof without incurring any obligation to make like changes on Patz machines, or attachments previously delivered. Specifications and prices subject to change without notice.

Proven Performance You Can Count On!

Patz Corporation

917 Business 141, POB 7 • Pound, Wisconsin 54161-0007

Ph: (920) 897-2251 • Fax: (920) 897-2142

www.patzcorp.com • info@patzcorp.com

Patz®

Since 1948

